

### Split-Core Current Transformers

Secondary Output (amps)	Primary Current (amps)	Window Diameter (in)
5A	600	D35
5A	600	D45
5A	1000	D45
5A	1000	D60
5A	2000	D45
5A	2000	D60
5A	2000	D80
5A	3000	D45
5A	3000	D60
5A	3000	D80

### Instructions for Creating Split-Core Current Transformer Part Numbers

Each row represents a complete part number.

Select the inner diameter of your Split-Core Current Transformer by choosing a code from the Window Diameter column. For example, D35 indicates a 3.5" inner diameter, D60 indicates a 6.0" inner diameter, etc.

#### Example Part Numbers

**5A600D35**

(5 A secondary output, 600 A primary current, 3.5" inner diameter)

**5A2000D45**

(5 A secondary output, 2000 A primary current, 4.5" inner diameter)